


SUNGAL NEXGEN®

French Door Racks Installation Instructions

- The center-to-center spacing of slots for shelves are $\frac{3}{4}$ " versus $1\frac{1}{2}$ " of conventional units-giving you twice the adjustability
- Each shelf has 8 prongs-to engage the uprights, rather than 4 to add stability to the system
- The shelves are easier to install as the front-top prong is 1 longer than all others so you only need to engage 2 prongs at a time
- Unlike current shelving units, this is a Free-standing System that can be moved back from the doors to increase light in the center of the shelves
- Upright slots are numbered so planograms can be determined in advance and shelves can be installed without any packaging
- Designed to achieve NSF certification

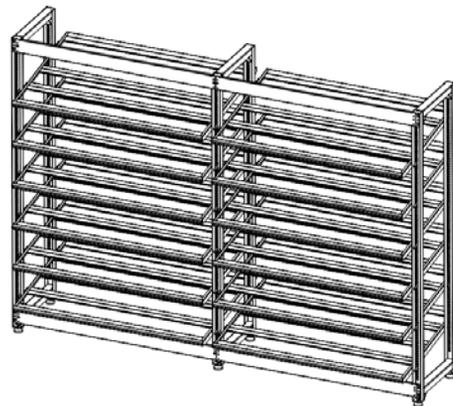


Install Processing

Any questions about parts or installations, please contact Sungal Customer Service at (618) 444-2802

1. Check Skid and Count Parts

- Review the uprights and confirm there is no damage
- Count the number of uprights
- See attached packing list
- Keep pallet as temporary storage container and observe shelves

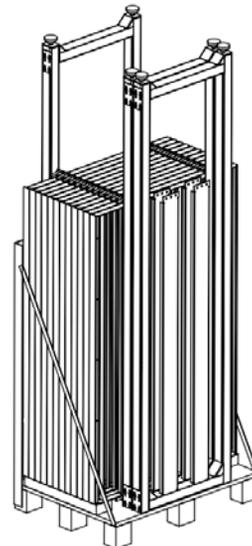

2. Remove Uprights Shelves

- Remove uprights and cut off protective wrapping-note that front and rear
- Uprights are connected top and bottom and are heavy, so lift properly.
- Locate cross braces in pallet and remove protective wrapping
- Remove 3 to 6 shelves and remove protective wrapping

Shelves

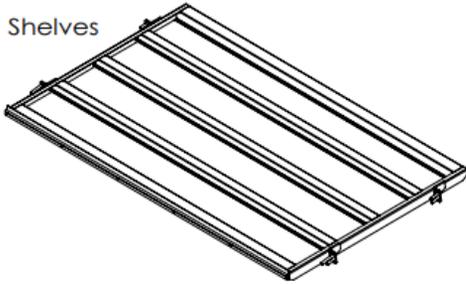


Fig.2B

Cross Brace

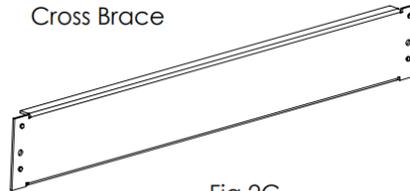


Fig.2C

Uprights

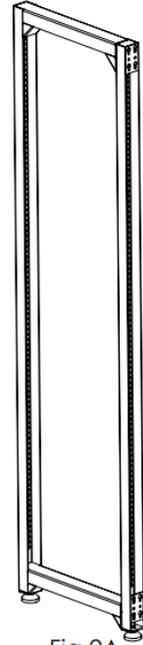


Fig.2A

3. Position the Side Door Rack

- Determine the side door
- Determine the distance you want the system from the door for maximum lighting exposure-note this a Free-Standing system
- It is best to snap a chalk line across the floor to position the uprights

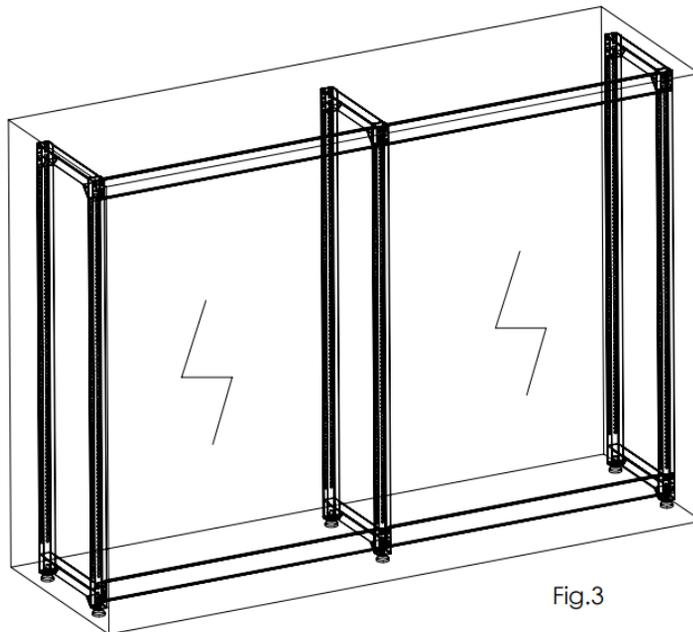


Fig.3

4. Set-up the Side Door Rack

- Take two uprights, 6 shelves and 2 cross braces into the cooler
- Set the uprights with the open side of the uprights toward the door
- Connect the two uprights at the top of uprights and at the bottom of uprights
- Install 2 shelves into the uprights-one top area and one lower area- you will later move these to match the planogram
- Always Install the shelf from the rear and Insert 2 longer prongs into the front uprights first
- Position the unit in the door and place the proper distance from the door

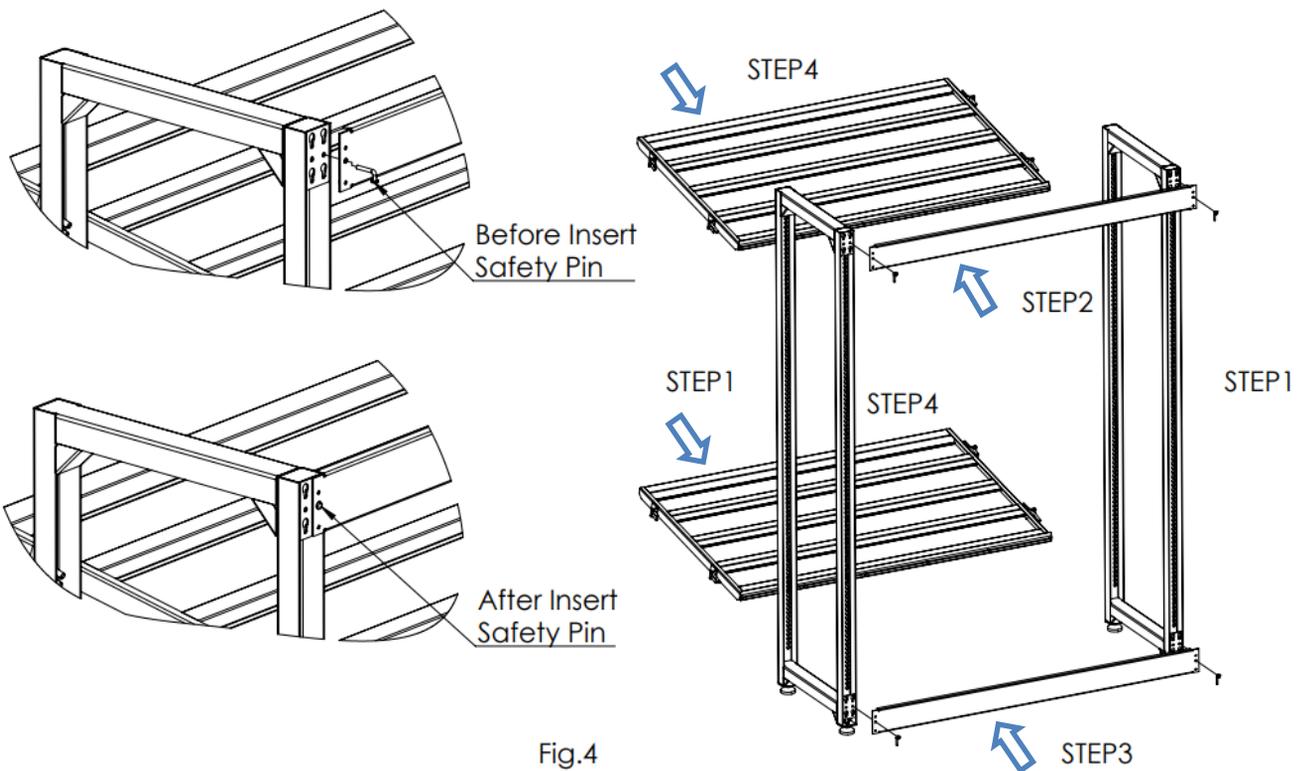


Fig.4

5. Install the Remaining Racks after Set up the Side Rack

- Bring the remaining shelves, uprights and cross braces into the cooler
- Build out from this side unit by repeating the process above-adding uprights and cross braces to each side of the center door

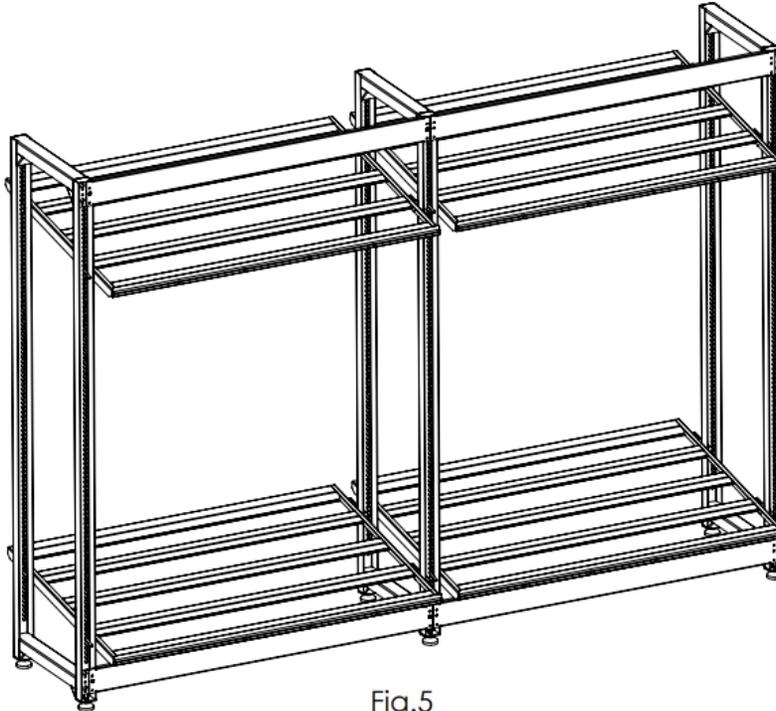


Fig.5

6. Install all Shelves

- Install the remaining shelves per the planogram-uprights are numbered planograms can be determined in advance and shelves can be installed without any packaging
- Always move the shelf from the rear and engage two 1" longer front-top prongs at a time to two front uprights

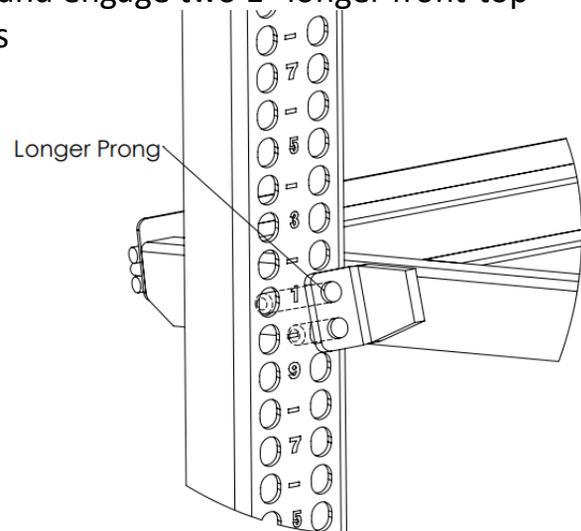


Fig.6B

Remarks: Inclined angle of shelf

How to adjust the inclination angle of the shelf: When the position of the front pin is fixed, the inclination angle increases by 2° each time the rear pin is raised by a hole.

