



# Installation Instructions


## Cooler Mat

Any questions about parts or installation, please contact Sungal Customer Service at (203)227-1917

### Step 1: Placing Mats


Note: Install base deck roller mats first

- 1 - Check cooler rack and shelves to make sure that all shelves are placed into post perforation according to POG and pitch requirements
- 2 - Seat mat on shelf properly and completely
- 3 - Work from the base deck up

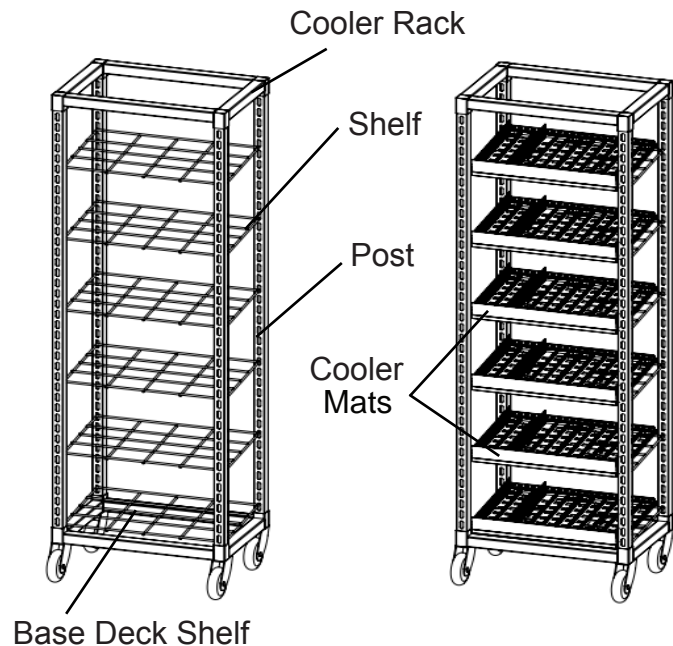


### Step 2: Snap in Front and Rear Fences

- 1 - Face the nose of the front fence forward
- 2 - Snap into U - Channel located on the front edge of the shelf

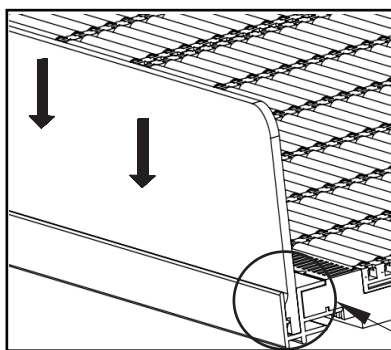


U - Channel

Nose facing the front of the shelf

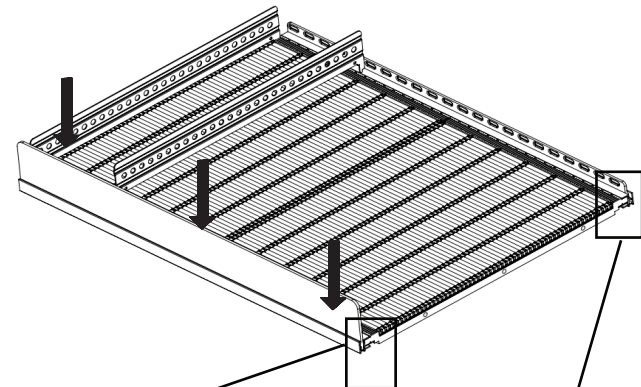

Nose facing the back of the shelf

- 3 - Face the nose of the rear fence backward
- 4 - Snap the rear fence into U-Channel located on the rear edge of the Shelf

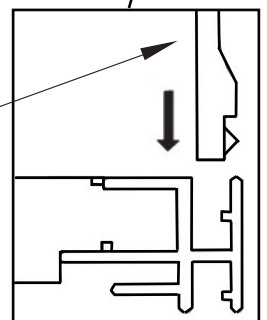







# Installation Instructions

## Cooler Mat

### Step 3: Place Dividers

- 1 - Work from one side to the other
- 2 - Place the dividers completely into the front and back slots.
- 3 - Align divider perfectly by checking the divider positioning holes.
- 4 - Test by moving merchandise back and allowing to roll forward.

- Do not squeeze merchandise between dividers

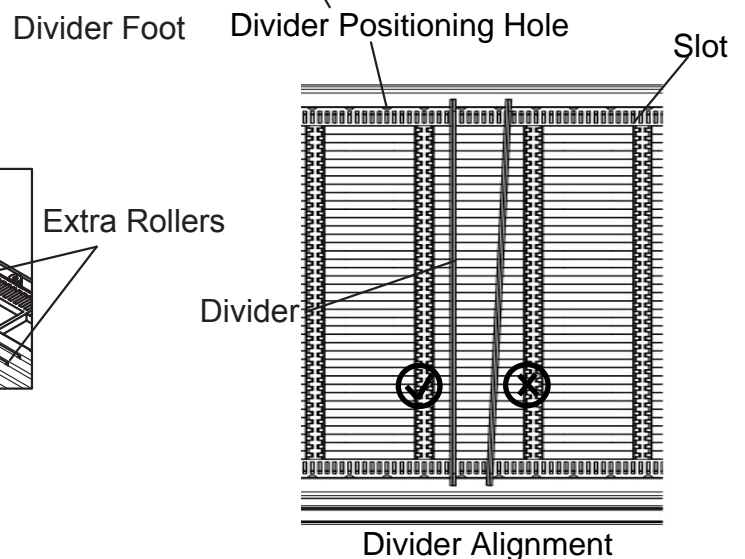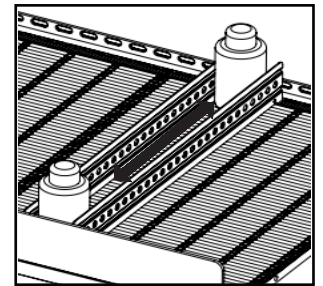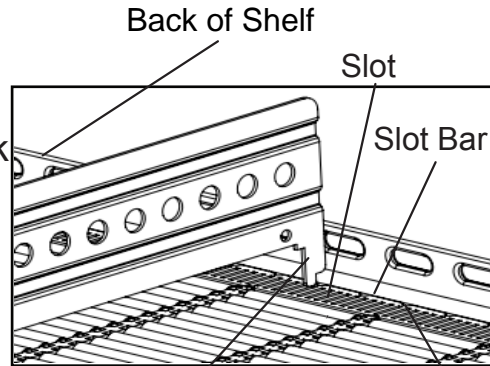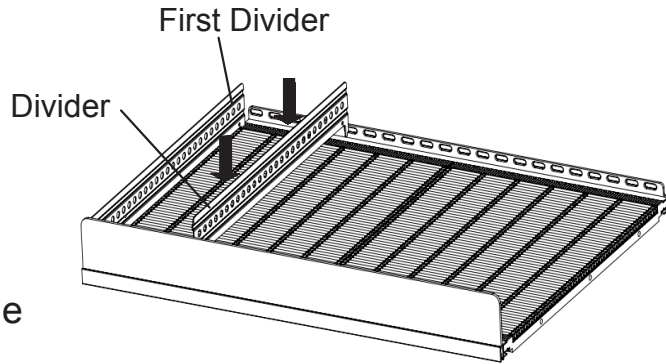

### Note:

Extra Rollers are attached to the bottom of each shelf

